



Ordering Guide



iBRiD®
MX6

Get ready to see hazardous levels of oxygen, toxic and combustible gas, and volatile organic compounds (VOCs) like never before.

The MX6 iBrid® is more than an intelligent hybrid of Industrial Scientific's best monitoring technologies—it's the most adaptable six-gas monitor on the market. With hundreds of possible sensor combinations, and a robust list of available configuration settings, the MX6 iBrid is ready to monitor oxygen, toxic and combustible gas, and volatile organic compounds (VOCs).

As your work changes, so can your MX6 iBrid. It uses five sensor slots to detect up to six gases. Each of those sensor slots accepts a variety of sensors, which means you can use the instrument with a PID sensor one day and an infrared sensor the next. What's more, settings allow you to adapt the instrument's behavior for your application. If you need to use a benzene PID response factor for one application, and butadiene for others, the familiar menu structure will allow you to quickly change settings.

The rugged MX6 iBrid carries our Guaranteed for Life™ warranty and is compatible with DSX™ Docking Stations. With a DSX Docking Station, maintenance is simplified and data becomes more than a spreadsheet filled with logged readings. Proactively manage your gas detection fleet—track trends, know when instrument maintenance will be required, and understand how your MX6 iBrid instruments are being used.

**INDUSTRIAL
SCIENTIFIC**

- 24 "Plug-and-Play" field-replaceable sensors including PID and Infrared options
- Up to 6 gases monitored simultaneously
- Simple, user-friendly, customizable, menu-driven navigation
- Five-way navigation button
- Durable, concussion-proof overmold
- Optional integral sampling pump with strong 30.5 meter (100 feet) sample draw
- Full-color graphic LCD is highly visible in a variety of lighting conditions
- Powerful, 95 dB audible alarm





Which MX6 iBrid Configuration Do You Need?

PART NO.	DESCRIPTION
MX6-K1230201	MX6 iBrid – LEL, CO, H ₂ S, O ₂ , Ext. Li-ion
MX6-K0230201	MX6 iBrid – LEL, H ₂ S, O ₂ , Ext. Li-ion
MX6-K1030201	MX6 iBrid – LEL, CO, O ₂ , Ext. Li-ion
MX6-K0030201	MX6 iBrid – LEL, O ₂ , Ext. Li-ion
MX6-K123R211	MX6 iBrid with Pump – LEL, CO, H ₂ S, O ₂ , PID, Ext. Li-ion
MX6-K1235201	MX6 iBrid – LEL, CO, H ₂ S, O ₂ , SO ₂ , Ext. Li-ion
MX6-0000R211	MX6 iBrid with Pump – PID, Ext. Li-ion
MX6-K0235201	MX6 iBrid – LEL, H ₂ S, O ₂ , SO ₂ , Ext. Li-ion

y = Agency Certification: 1 = UL/CSA, 2 = ATEX/IECEX, 3 = MSHA, 4 = ANZEx, 5 = CHINA EX, 6 = China MA, 7 = GOST-R/GOST-K, 8 = KOSHA, 9 = INMETRO, A = MED, B = SANS 1515, C = CHINA KA, D = TIIS

z = Language: 1 = EN, 2 = FR, 3 = ES, 4 = DE, 5 = ITA, 6 = DUT, 7 = PT, 9 = RUS, A = POL, B = CZE, C = CN, D = DAN, E = NOR, F = FIN, G = SWE, J = JPN

Which Accessories Will You Need?


CHECKLIST

- | | | |
|--|--|--|
| ☐ Docking Stations | ☐ Sample Tubing | ☐ Vehicle Chargers |
| ☐ Calibration Stations | ☐ Confined Space Kits | ☐ Multi-Unit Chargers |
| ☐ Compliance Tracking Software (iNet Control) | ☐ Spare Batteries | ☐ Carrying Cases |
| ☐ Probes | ☐ Replacement Sensors | ☐ Filters |
| | ☐ Desktop Chargers | |




The MX6 iBrid Color Display


Enhanced Visibility – Expanded Functionality

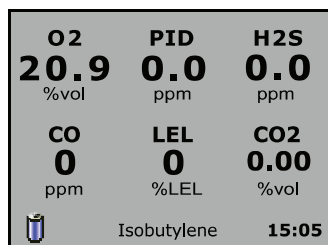


The MX6 iBrid clearly shows real-time readings in PPM or % by volume.

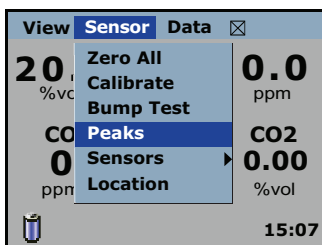


An intuitive menu provides easy access to features and setup.

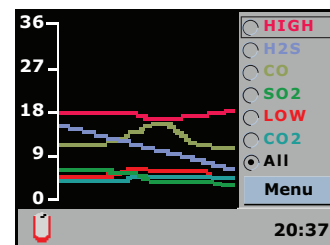


Data log trends and direct readings can be viewed graphically.

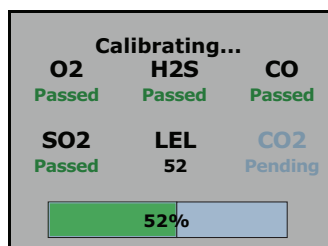


Calibration progress and results are shown for each sensor.

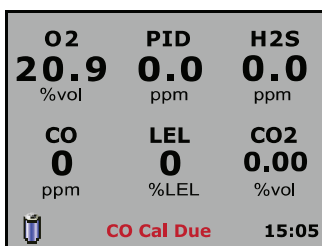


A "calibration due" warning appears for each relevant sensor.

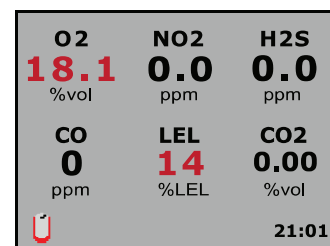

Bright red numerals and a flashing backlight show alarm conditions.

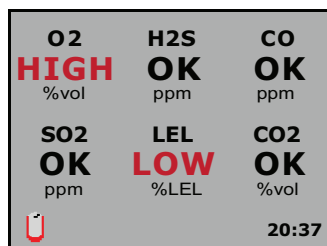

Alarms shown with "Go/No Go" text and flashing backlight.

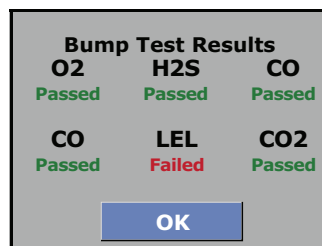

Color-coded text shows test or calibration results at a glance.

